



BASE REPAIR INSTRUCTIONS

Example 1:

1 x Wheelbarrow G1 Stone + 1 Spade Cement
(not too much) – add water & mix

Example 2:



1 x Cube G1 Stone (+/- 1.7 Ton) + 1 x 50kg bag Cement,
add water & mix.

NOTE: THE MIX MUST BE DAMP NOT WET LIKE CONCRETE

The road surface is only as good as it's base !
Therefore deep potholes need the road base to be reinstated.

HOW TO MAKE BASE REPAIR ?

Mix G1 Stone also known as Crusher Run with +/- 2% Cement and a small amount of water.

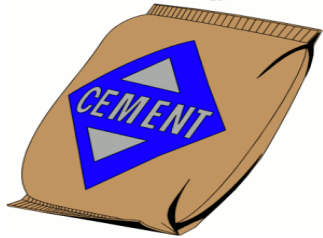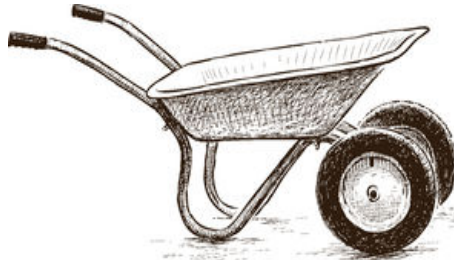

1. FILL HOLE WITH MIX
2. RAKE EVENLY
3. COMPACT WITH RAMMER

NOTE:
YOU SHOULD BE LEFT WITH ONLY
THE ASPHALT LAYER TO FILL .



Did you know?

You will also save money as Base Material cost less than Cold Asphalt.